



Route the **Inflow Design Flood** through the spillway or breach. Determine the **Maximum Water Storage Elevation**. This elevation is the **Height** of the dam measured from the downstream toe. It also represents the **Impounding Capacity** of the dam. Present the results as demonstrated below.

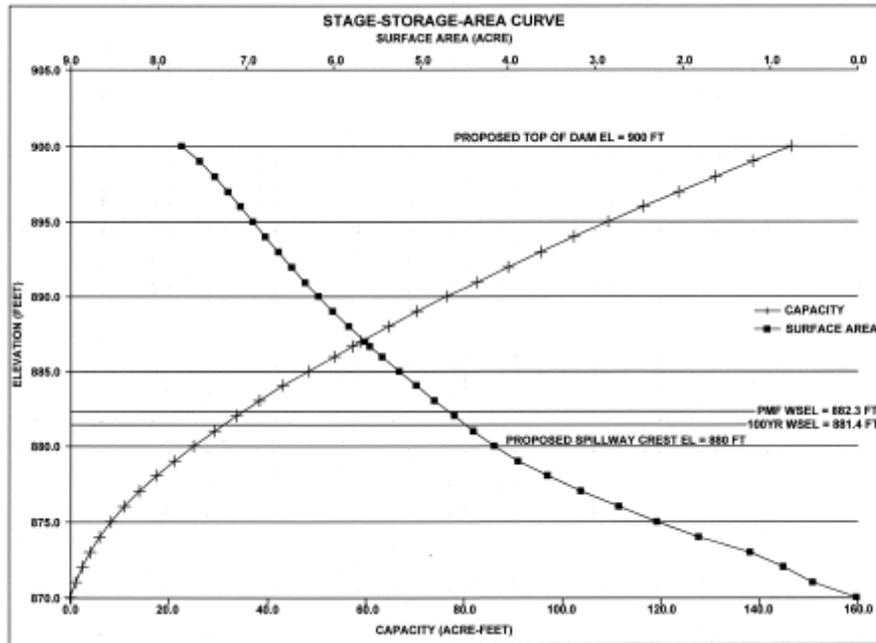

Stage Storage Curve for Example Reservoir with IDF Levels Clearly Identified

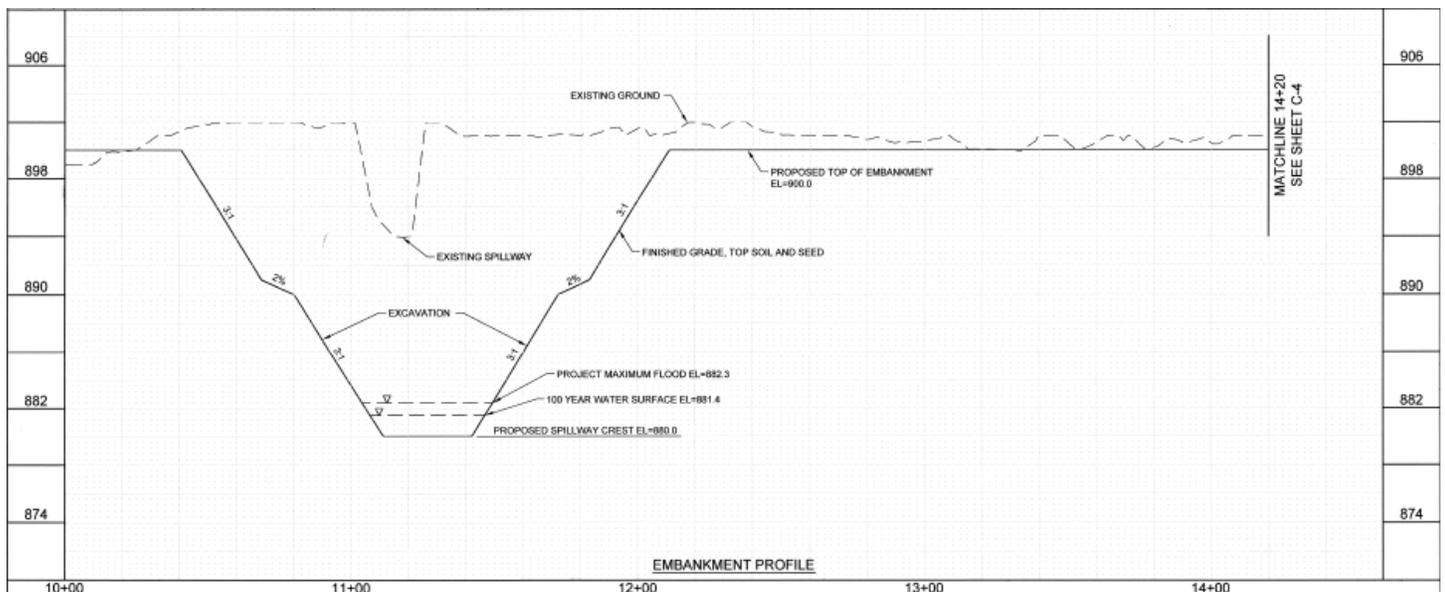

Spillway Crest Cross Section for Example Reservoir with IDF Levels Clearly Identified